

中文说明书 1-8

English User Manual 9-14

通信版数控电源钣金外壳安装说明

外壳适用数控电源型号：

DPS5015(DPS5015-USB)、DPS5020(DPS5020-USB)、DPS3012、DPH3205



一、 安装注意事项：


- 安装前请仔细阅读本文档，如有疑问请与本公司联系。
- 本外壳采用冷轧钢板材料，表面喷塑，安装、使用时应防止尖锐物体划伤，避免阳光直晒和潮湿环境。
- 组装时防止短路，正确连接正负极。
- 不可在电源接通的情况下连接电路。

- 尽量避免震动和跌落。

二、产品规格



2.1 装配爆炸图:

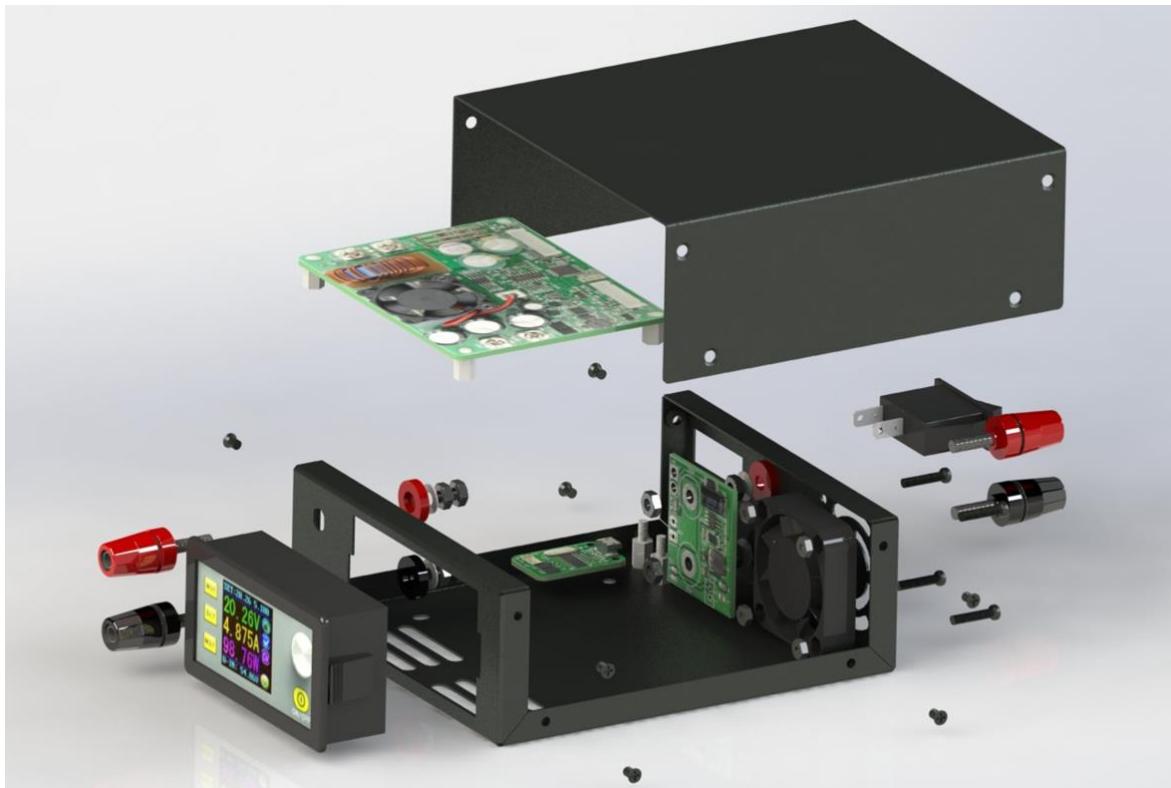

2.2 器件清单:

名称	规格	数量	备注
上盖	137*123*51 MM(长*宽*高)	1	冷轧钢板
底壳		1	
风扇	4010	1	5V 供电
风扇供电板	36*40 (长*宽)	1	
接线端子	M4*36	4	红色 2 个黑色 2 个
冷压端子接头	UT2.5-4	7	U型插接头
船型开关	KCD3	1	
连接电线	RV2.5 平方单芯软线	2	红: 30cm 黑: 25cm
外壳配套螺丝	平头 M3*5	8	
尼龙支撑柱	M3 单头六角尼龙柱 L=8mm	2	PA66
尼龙螺母	M3 六角尼龙螺母 H=2.4mm	2	PA66
风扇固定螺栓	圆头 M3*13	4	螺丝螺帽各 4 个
功率模块、通信板固定螺丝	圆头 M3*5	6	功率板 4 个 通信板 2 个
透明自粘脚垫	Φ12*4	4	

2.3 产品零件图:



备注：

外壳配套螺丝 M3*5 8个	尼龙支撑柱 M3 单头六角 尼龙柱 L=8mm、尼龙螺母 M3 六角尼龙螺母 H=2.4mm	风扇固定螺栓 圆头 M3*13 4个	功率模块、通信板固定螺丝 圆头 M3*5 共 6个	冷压端子接头 UT1-4 7个


三、 安装步骤：

3.1 安装准备:

- 数控电源模块一个。
- 工具（电烙铁、焊锡、十字螺丝刀、剥线钳等）。
- 适当的安装环境。

3.2 安装步骤:

- a) 使用剥线钳截取适当长度的电线，电线长度参考下图：

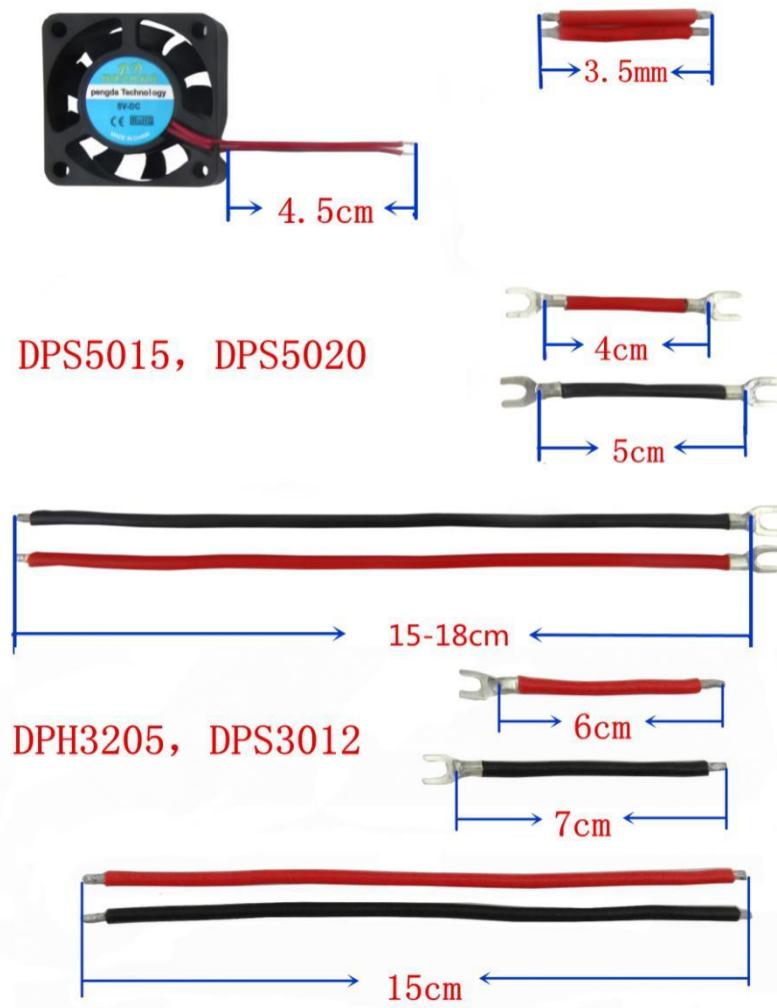

- b) 安装输入接线端子及开关（将接线端子和开关卡在后面板留出的卡槽上，接线端子采用上正（红）下负（黑）的原则安装，固定螺丝要拧紧）

c) 安装风扇供电板:




- 将风扇电源线焊接到风扇供电板正面左下方的 5V 焊盘上
(注意正负极不要焊反)。



- 将电源输入线焊接在风扇供电板左上角的两个焊盘上,(注意正负极不要焊反)。
- 将供电板安装在后面板的接线端子上(注意正负接口),然后使用螺母固定。
- 将电源开关用预先准备好的连接线焊接在供电板 Key 处焊盘上。

d) 安装散热风扇 (注意采用配套的螺栓固定, 风扇贴有指示标签的一侧朝外, 不可装反)

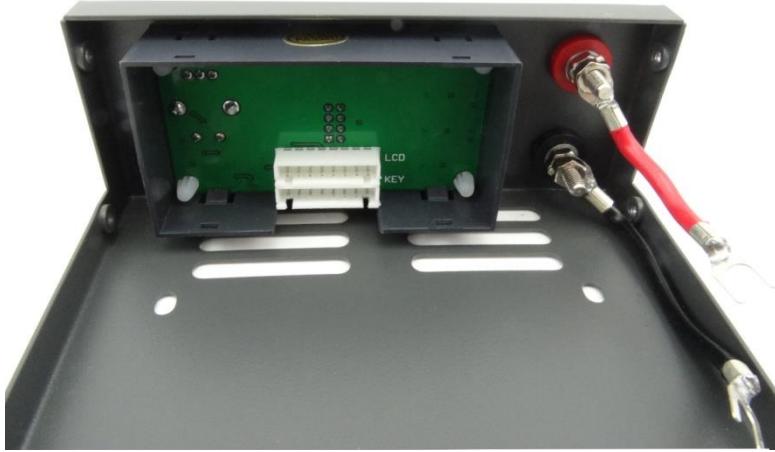

- e) 安装好输出接线端子, 将准备好的带有冷压端子的输出线连接到输出接线端子上, 并用螺母拧紧 (输出端子上正下负安装, 输出线不要接错)
- f) 本外壳针对的产品分为显示部分、功率部分、USB 通信部分, 安装过程为:



- 首先安装通信部分(如果产品不附带通信功能, 本步骤忽略), 使用尼龙支撑柱和尼龙螺母把通信板支撑起来, 然后使用通信板固定螺丝将其固定在底壳预定位置上

- 安装显示模块将其卡入前面板卡槽上(卡入过程用力要适当，防止造成前面板变形)。
 - 安装上显示模块和功率模块连接的排线，注意 PCB 板的丝印层 LCD 和 KEY 排线插接的位置（排线一定走 PCB 板的下方，否则电感会对其有干扰）。
 - 根据下盖板四个孔的位置安装功率模块，使用配套螺丝将其固定住。
 - 将输入正负分别接到功率模块的 IN+, IN-；输出正负接到 OUT+, OUT-。
 - 通过通信板连接线连接通信板与功率板
- g) 连接好之后可以通电看是否连接成功。(注意通电前再次检查接线是否正确)
- h) 安装上盖，将上盖装配到下壳，采用配套螺丝固定
- i) 本产品配套四个透明脚垫，用户可对称粘贴到外壳底部四个角上。

3.3 内部连线图：



Digital Control Power Supply Housing Installation Instructions

This housing is suitable for the following mode of digital control power supply:

**DPS5015 (DPS5015-USB-BT)、DPS5020 (DPS5020-USB-BT)、DPH5005(DPH5005-USB-BT)、
DPS3012、DPH3205**




1. Installation Note:

- 1.1 Please read the instructions carefully before installation. If you have any question, please contact us.
- 1.2 This housing adopts cold-rolled steel sheet material, so please avoid being scratched by sharp objects, direct sunlight and humid environment.
- 1.3 when install this, please avoid short-circuit and connect positive and negative electrode correctly
- 1.4 Forbid connect the circuit after power on.
- 1.5 Please avoid vibration and fall.

2. Product Specifications



2.1 Product Assembly Explode Diagram

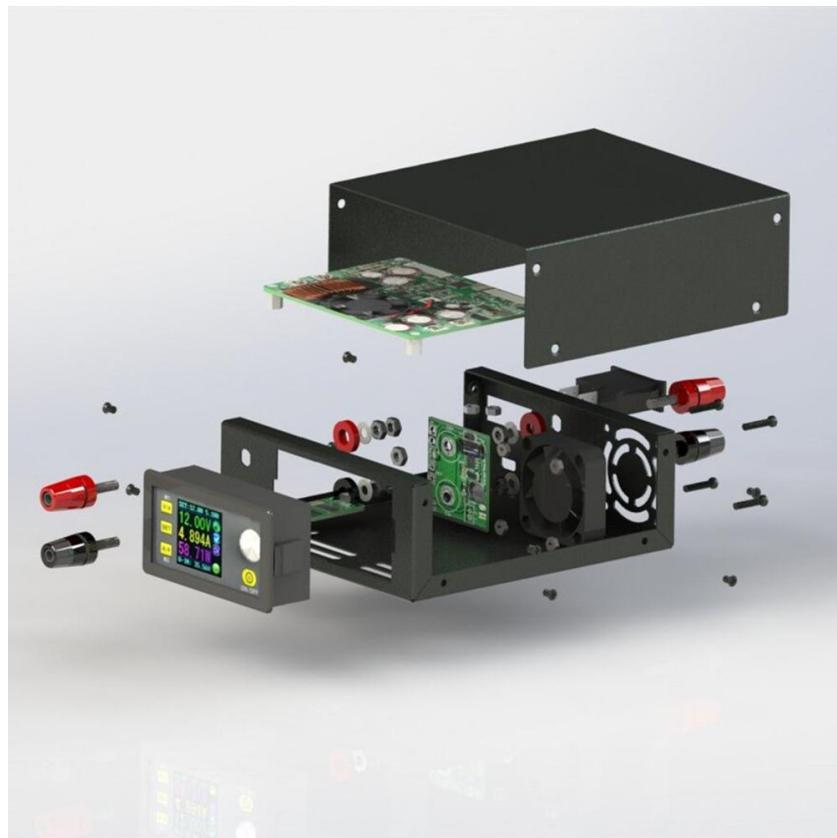


2.2 Kit parts list

Item	Specification	Qty.	Remark
Upper cover plate	137*123*51 MM(L*W*H)	1	Cold-Roll Steel Sheets
Lower cover plate		1	
Fan	4010	1	5V power supply
Fan power supply board	36*40 (L*W)	1	
Binding post	M4*36	4	Red 2pcs Black 2pcs
Cold press connecting terminal	UT2.5-4	7	Spade Terminal
Rocker Switch	KCD3	1	
Connecting line	RV 2.5 square single core flexible cord	2	Red 30cm Black 25cm
Screw for housing	Flat head M3*5	8	
Fan fixed screw	Fillister head M3*13	4	Screw 4 pcs Nut 4 pcs
Nylon column	M3 Single head hex nylon column L=8mm	2	PA66
Nylon Nut	M3 hexagonal nylon nut H=2.4mm	2	PA66

Power module and communication board fixing screw	Fillister head M3*5	6	
Transparent sticky mat	$\Phi 12*4$	4	

2.3 Kit Parts Picture

- 1- Lower cover plate
- 2- Fan
- 3- Connecting line
- 4- Transparent sticky mat
- 5- Fan power supply board
- 6- Rocker Switch
- 7- Binding post
- 8- Power module and communication board fixing screw
- 9- Cold press connecting terminal
- 10- Screw for housing
- 11- Nylon column 、 Nylon Nut
- 12- Fan fixed screw
- 13- Upper cover plate

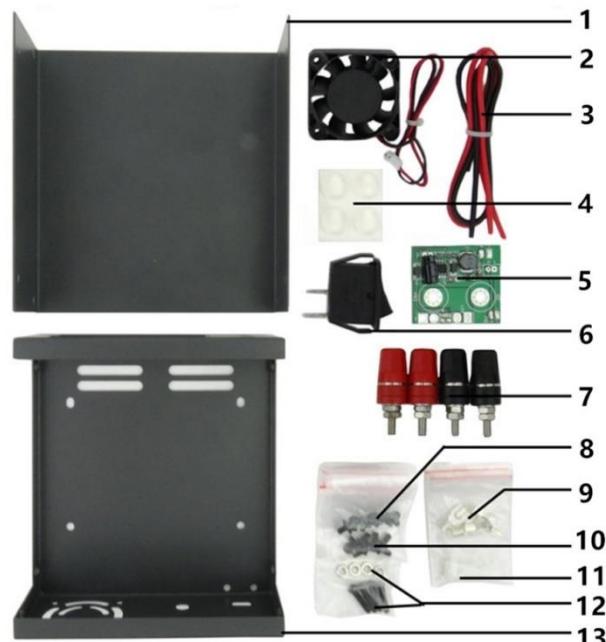

Note:

Screw for housing 8pcs	Nylon column M3 Single head hex nylon column L=8mm 2pcs 、 Nylon Nut M3 hexagonal nylon nut H=2.4mm 2pcs	Fan fixed screw Fillister head M3*13 4pcs	Power module and communication board fixing screw Fillister head M3*5 6pcs	Cold press connecting terminal UT2.5-4 7pcs

3 Installation Procedures


3.1 Installation Preparation

- 3.1.1 1 pcs digital control power supply
- 3.1.2 Tools (Soldering iron, solder, Philips screwdriver, Wire stripping pliers)
- 3.1.3 A proper installation environment

3.2 Installation Procedures

3.2.1 Use wire stripping pliers to cut proper length line, the length as follows:

14- Fan line 45mm

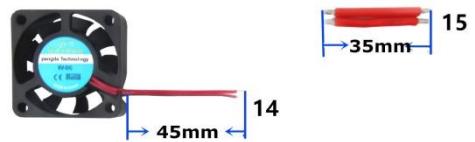


15- Switch connecting line 35mm



16- Output positive line 50mm


17- Output negative line 60mm

18- Input positive and negative connecting line

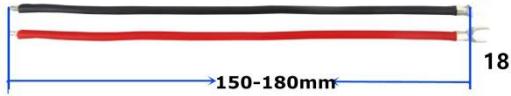

150-180mm

19- Output positive line 60mm

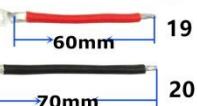

20- Output negative line 70mm



21- Input positive and negative connecting line



3.2.2 Install the input binding post and switch: put binding post and switch on slot at rear panel. Install binding post according to rule that red is positive above, black is negative below; and screw it tightly.

3.2.3 Install fan power supply board:



3.2.3.1 Weld fan line on 5V place at fan power supply board (Note: can't weld positive and negative reversely).




3.2.3.2 The power input line welding in the fan power supply board on the upper left corner of the two pads, pay attention to the positive and negative do not welding the wrong.

3.2.3.3 Install fan power supply board on the binding post (red is positive above, black is negative

below), then use the screw to fix them.

3.2.3.4 Use the prepared wire to weld the power switch on the key place at fan power supply board.

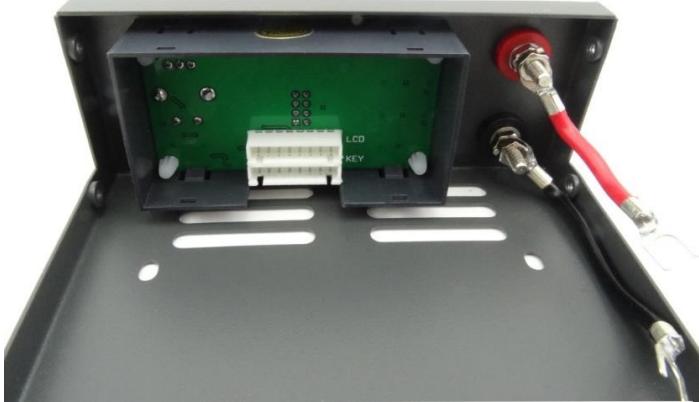

3.2.4 Install the fan: use the matched screw to fix. The one side attached label is installed outward.

3.2.5 Install the output binding post, and use the output line with cold press connecting terminal to connect input (red is positive above, black is negative below), and screw it tightly

3.2.6 Module connection using pluggable terminal, the input and output of the four threads into the correct hole in the terminal, and tighten the screw (this process must pay attention to the four lines do not get wrong)

3.2.7 This step contains power supply board installation, display part and USB board installation.

3.2.7.1 Firstly install USB communication board (if you bought no communication version, please ignore this step). Use nylon column and nylon nut to prop USB board up. Then use the screw to fix it on preset place of bottom housing

3.2.7.2 Install the display part. Please put it on slot at front panel (when put it on slot, strength will be proper to avoid the deformation).

3.2.7.3 Use the cable to connect display part with power part. Note the words LCD and KEY on PCB to correspond to the same words on display part (the cable must go through under the PCB, otherwise the capacitor will generate interface to effect it).

3.2.7.4 According to the following four holes of the cover plate, mounted power module and use screws to hold.

3.2.7.5 Connect input positive and negative to connect IN+ and IN-, and connect output.

3.2.7.6 use communication cable to connect USB board with module

3.2.8 After connecting, please power on to check it work or not (before power on, check connection again)

3.2.9 Install the housing. The upper cover plate will be installed on the upper cover plate. And then use the screw to fix them

3.2.10 There are 4 transparent sticky mat, you can paste symmetrically them on the 4 corners on the bottom.



3.3 Internal connection diagram:

